



**FR32**



**FR36**



**FR46**



**FR11**

## Remotes

There are four rolling code remotes in the FR suite, and a wireless keypad. All remotes are all compatible with any FORESEE garage door opener, or FORESEE standalone receiver.

Note the channel numbers of the buttons printed over their photos.

### Adding a remote to a FORESEE receiver

Press the red **CODE** button on the receiver. The red LED will flash once. Press the button on the remote that you wish to program. Repeat both steps for every button that you use.

### Adding a remote to a garage door opener

Press the **'S'** button once on the opener. A LED will come on. Now press any button on the new remote twice.



## Forematic

9 Vanalloys Estate  
Stoke Row  
Henley RG9 5QW

### FA62

2 channel wire-  
less keypad.



### Battery codes

- FR36/46 – GP27
- FR32 – GP27
- FR11 – GP23
- FR62 – CR2032
- FD142 – GP27